 


# UPRIGHT DISPLAY COOLER

## Instruction Manual

ZX-BRC-09

ZX-BRC-12

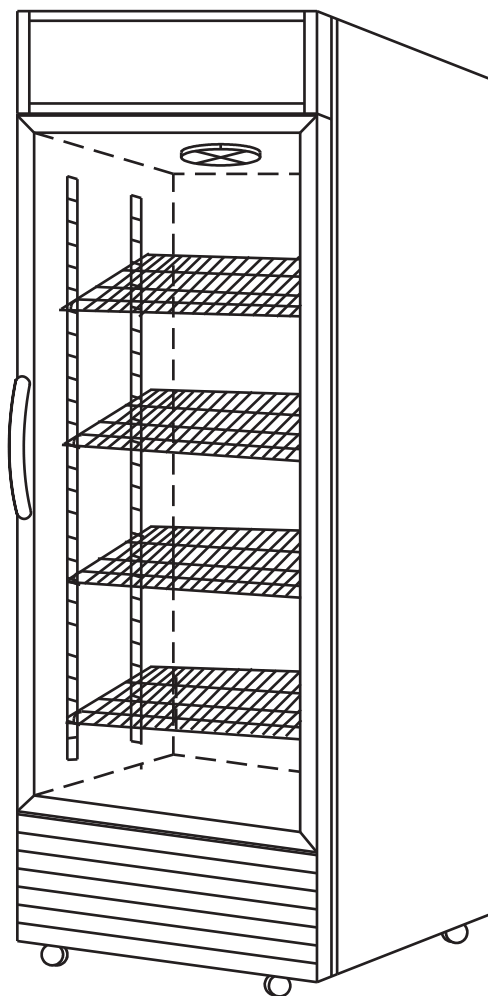



# Congratulations

Dear Customer:

Welcome to the our family. Thank you for purchasing one of our products.

Our goal is to provide you with superior service. If there is anything missing from or wrong with your order, or if you have any questions about using our product, PLEASE contact us.

Email: [support@homyd.com](mailto:support@homyd.com)

Our team is available 24/7 to address your questions, comments, and concerns. Your satisfaction is our ultimate goal. We want to make everything right so you'll share your positive experience with other shoppers.

If you experience any problems, please send an email to [support@homyd.com](mailto:support@homyd.com)

Our mission:

- \* To be the most trusted appliance brand.
- \* To create practical, compact appliances that better your life.



# Contents

<b>SAFETY PRECAUTIONS</b>	<b>01-06</b>
<b>HOW TO USE</b>	<b>07-09</b>
<b>CLEANING</b>	<b>10</b>
<b>IN CASE OF THE FOLLOWING</b>	<b>11</b>
<b>BEFORE REQUESTING SERVICE</b>	<b>12</b>
<b>REQUIRED INFORMATION</b>	<b>13</b>
<b>WARRANTY AND SERVICE</b>	<b>14</b>

# | Safety Precautions

To ensure proper use, please thoroughly study these **SAFETY PRECAUTIONS** before operating the unit.

- The purpose of the safety precautions in this manual is to ensure safe and correct use of the unit to minimize risks that could cause serious damage and injury to you or other persons.

The safety precautions are divided into **WARNINGS** and **CAUTIONS**.

Cases where improper handling of the unit could lead to death or serious injury are listed

under the “  **WARNING** ” heading.

However, the cases listed under the “  **CAUTION** ” heading could also lead to serious results.

To ensure the safety, adhere strictly to both types of safety precautions.

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.  
Children shall not play with the appliance.  
Cleaning and user maintenance shall not be made by children without supervision.
- The A-weighted emission sound pressure level is below 70 dB(A).
- If the supply cord is damaged, it must be replaced by the manufacture ^ its service agent or similarly qualified persons in order to avoid a hazard.

# I Safety Precautions

- The appliance shall be disconnected from its power source during cleaning or maintenance and when replacing parts.
- **Storage:** During periods of inactivity or before storing, remove all beverages from the appliance, disconnect it from the supply and clean the appliance and its accessories thoroughly.  
Keep the door(s) of the appliance open, to allow all humidity to escape.  
Prop the door open with a piece of wood or the like to prevent the door from closing completely.  
Like this, mold or bad smell can be prevented.  
Store the appliance in a dry, protected environment, preferably at room temperature.  
To protect the appliance from dust, cover it with a cloth that allows air circulation inside the appliance.  
You can also store the appliance in its original packaging.  
Keep the appliance out of reach of children.
- Regularly check the power plug and power cord for damage.  
If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Refrigerants must be evacuated and disposed of by a qualified specialist in accordance with federal and local regulations before the appliance is scrapped.  
**Caution:** Please keep the appliance away from fire or similar glowing substances before you dispose of it.  
Please remove the door before you dispose of the appliance.
- **WARNING:** Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING:** Do not damage the refrigerant circuit.
- **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- **WARNING:** The lamp must not be replaced by the user!  
If the lamp is damaged, contact the customer helpline for assistance.

# | Safety Precautions

- **WARNING:** To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- **WARNING:** In order to reduce flammability hazards the installation of this appliance must only be carried out by a suitably qualified person.



**WARNING** Improper handling of the unit could lead to death or serious injury.



**CAUTION** Improper handling of the unit could lead to serious results depending on the circumstances.

- Text set off by the exclamation mark contains information that should be strictly adhered to.
- After reading the instruction manual, store it an easily accessible place where the user(s) of this product can easily find it.



# SAFETY PRECAUTIONS



The symbol is a warning and indicates the refrigerant and insulation blowing gas are flammable.

Warning: Risk of fire / flammable materials.

Warning - Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

Warning - When positioning the appliance, ensure the supply cord is not trapped or damaged.

Warning - Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Warning - The refrigerant and insulation blowing gas are flammable. When disposing of the appliance do so only at an authorized waste disposal centre. Do not expose to flame.

## ◆ PRECAUTIONS FOR INSTALLATION

### ⚠ WARNING:



Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.

 
## ◆ PRECAUTIONS FOR USE

### ⚠ WARNING:




DON'T TAMPER

All repairs, disassembly and modifications should be performed only by qualified technicians. Attempting to perform these yourself could result in a fire, malfunction, and injury.




ELECTRICAL SHOCK HAZARDS

 Never splash water directly onto the product or wash with water as short-circuit and electrical leakage could result.



DANGER OF EXPLOSION

 Never put flammable or volatile substances into the unit as explosion and fire could result.




PROHIBITED

Do not damage, modify, excessively bend, strain, twist or bundle up the power cord. Also, placing heavy objects the power cord or squeezing it in a tight place could damage it, possible resulting in electrical shock or fire.




PROHIBITED

 Use a dedicated wall outlet. Do not use extension cords or convenience receptacles as this could result in electrical shock, overheating and a fire.

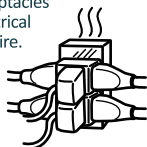

FLAMMABLE

 Never use flammable spray cans or leave flammable substances near the unit. Sparks from electrical switches could result in explosion and fire.




# SAFETY PRECAUTIONS

## PRECAUTIONS FOR USE

### ⚠ WARNING

 ❗ The cooler is intended for storage and display of beverages for sale. Do not use for other purpose than intended as this could adversely affect items placed in the unit.



Beverages



 
Never attempt to insert fingers, sticks, etc. Into the cold air suction outlet as a circulation fan is rotating at high speed inside the outlet. Injury, electrical shock and improper operation could result.



⊘ For indoor use only. Using the unit in a location exposed to rain could result in electrical leakage and electrical shock.



PROHIBITED

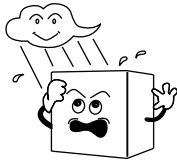


PROHIBITED

Never place heavy objects or items containing water on top of the unit. Objects could fall down and cause injury and spilled water could deteriorate the insulation of electrical components and result in electrical leakage.




 ❗ Install the unit in a location where the floor is sturdy enough to support the load of the unit. If the floor is not sturdy enough or installation is incorrectly performed, the unit could tip over and falling shelves and products could cause personal injury.



CAUTION AGAINST EXPLOSION

 If you find gas leakage, please don't touch the appliance. Turn it off and open the doors and windows for ventilation. Gas leakage could cause explosion, fire, and fire injury.



❗ Store the unit in a location where it is not exposed to rain. Using a unit that has been exposed to rain could result in electrical leakage and electrical shock.



Keep away from hot air sources cooling performance is reduced if the unit is placed near heat sources such as hot plates and stoves and if it is exposed to direct sunlight.




❗ Leave disassembly and disposal of the unit to qualified experts.



Should the unit need temporary storage make sure not to store the unit in a location where children play and take precautions so that the door cannot be completely closed. This will minimize the risk that a child becomes trapped inside the compartment.


### WELL VENTILATED PLACE

 Please make sure there is more than 10cm space between UPRIGHT COOLER and the wall. If there is no space, cooling capacity can drop down.

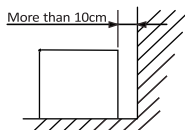

DANGER OF ELECTRICAL SHOCK

 If installation in a damp location is unavoidable, also install an electrical leakage circuit breaker. If no electrical leakage circuit breaker is installed, electrical shock could result.




# SAFETY PRECAUTIONS

## PRECAUTIONS FOR USE


### ⚠ WARNING



 Never hang from the door or climb onto the unit. The unit could tip over or fall and cause material damage or injury.

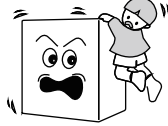

 
Disconnect the power cord plug from the wall outlet before moving the unit and make sure that the power cord is not damaged during transport. A damaged power cord could result in electrical shock and/or fire.




Grasp the handle when closing the door. Holding at other positions could result in pinched fingers and injury.



 
Do not push hand against or apply excessive force to glass surfaces as the glass could break and cause injury.

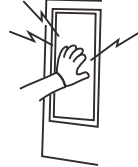

 When disconnecting the power cord plug from the wall outlet, hold at the plug main body close to the outlet. Pulling the cord could cause wire breakage, possibly resulting in overheating and fire.



 Make sure that the unit does not tip over or fall when it is moved. A falling unit could cause serious injury.



Do not throw items onto the shelves and do not place items totaling more than 25 kg on each shelf. The shelf could fall down, possibly causing injury.



Be sure to attach and secure shelves correctly. An improperly attached shelf could fall down and cause injury.



# HOW TO USE

## BEFORE USE

 
- Remove shipping package, tape, etc, and leave doors open. Ventilate for a while.
- The unit is cleaned before shipment. However, clean the compartment interior after delivery.
- Please insert power supply, plug into the wall outlet, single-phase to correct voltage.
- Allow the unit to operate for about 1 hour to cool the compartment before placing items in the cooler.

## WAIT 5 MINUTES OR MORE BEFORE RE-STARTING

- Restarting the unit immediately after it has been turned off may cause fuses to blow and activate the circuit-breaker, the compressor may be overloaded, and/or other damage may occur.

## TEMPERATURE ADJUSTMENT



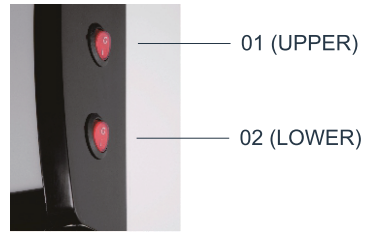





### 1. Indicator light status description



Indicator light	Symbol	Status	Meaning
Setting	set	ON	Parameter setting
		OFF	Status of temperature measuring and controlling
Refrigeration	❄️	ON	Refrigeration work
		OFF	Refrigeration stop
		FLASH	Refrigeration time delay
Refrigeration	❄️	ON	Defrost work
		OFF	Defrost stop
Fan	🌀	ON	Fan work
		OFF	Fan stop
Defrost dripping	drip	ON	Start defrost dripping
		OFF	Stop defrost dripping

# I HOW TO USE

## 2. Keys operation

Keys description	Function	Button action
	01 -- Light switch of Canopy: Turn on the canopy light, o Turn off the canopy light	Press the response
	02 -- Light switch of Cabinet: Turn on the cabinet light, o Turn off the cabinet light	Press the response
	Enter the status of parameter setting( user menu) : In the status of temperature measuring and controlling, press <b>Set</b> key for three seconds to enter user menu, it displays the code <b>54</b> , then press <b>Set</b> key again, display the value of <b>54</b> (Factory set value 34°F). It could be modified by pressing the key <b>▼</b> or <b>▲</b> (adjustable range 32-50°F)	Pressing the keys for 3s
	Enter the status of parameter setting (admin menu): In the status of temperature measuring and controlling, press <b>Set</b> key for three seconds to enter user menu, it displays the code <b>54</b> , Press <b>▲</b> again to displays the code <b>54</b> , <b>54</b> is the administrator mode, do not use at will, if necessary, please use under the guidance of customer service	Pressing the keys for 3s
	Switch between menu and parameter	Press the response
	Adjust menu and parameters	Press the response
	Adjust menu and parameters	Press the response
	Press the <b>▼</b> and <b>▲</b> keys together for 3 seconds to convert units (Celsius / Fahrenheit)	Pressing the keys for 3s
	In the status of temperature measuring and controlling, press for three seconds to force the switch between refrigeration, defrost/defrost delay, defrost dripping.	Pressing the keys for 3s
	In the state of defrost (Any of the following condition could close defrost): 1.Evaporator sensor temperature greater than 54°F, defrost is closed. 2.Defrost run for 35 minutes, defrost is closed. 3. Hold and press  for three seconds, defrost is closed.	Pressing the keys for 3s
	Under the status of parameter setting, press  key or no key operation within 30s, it will exit from parameter setting and automatically save the current parameter value.	Press the response

# I HOW TO USE

## DRAIN TRAY

- Defrosting is performed automatically and drain water is collected in the drain tray.
- Water in the drain tray is evaporated automatically. In humid environments, there will be a large amount of water in the drain tray, so please throw away drain water once a day.

## EFFICIENT USE

- To prevent cold air from escaping, open and close the door quickly and keep the door opened for as short a time as possible.
- Please install the unit in a place which is well-ventilated.

## SHELF HEIGHT ADJUSTMENT

- The shelf height can be adjusted.
- Arrange the shelves in accordance with the dimensions of the items to be placed in the

## PLACING ITEMS IN THE SHOWCASE

- This showcase employs a forced circulation of cold air system. If circulation of cold air is obstructed, the items will not be adequately refrigerated. Pay attention to the following points:
- Do not let items obstruct the cold air inlet and suction outlet.
- Place items so that they do not protrude from the shelves. The gap between the shelves and the door is used for circulation of cold air.
- Place items evenly on all shelves.
- Commercial refrigeration display cooler.
- This equipment is intended for the storage and display of non-potentially-hazardous bottled or canned products only.

## CLEANING

- $32\text{ }^{\circ}\text{C} \pm 2\text{ }^{\circ}\text{C}$  on appliances of climatic class 0,1,2,3,4,6 or 8;
- $43\text{ }^{\circ}\text{C} \pm 2\text{ }^{\circ}\text{C}$  on appliances of climatic class 5 or 7.

# I CLEANING



To prevent any electrical shock hazards or injury by rotating circulation fan, always disconnect the power cord plug from the wall outlet before cleaning.

 
## 1 EXTERIOR AND COOLER COMPARTMENT

Wipe with a soft, dry cloth. If very soiled, wipe with a cloth that has been moistened with a detergent. Then wipe with a cloth that has been dipped in water.



Do not splash water directly onto the cooler and do not wash with water. Short-circuit and electrical shock could result.

- Clean the cooler regularly to keep it clean at all times.
- Never use polishing powder, soap powder, benzine, oil or hot water as there will damage the painting and plastic components.

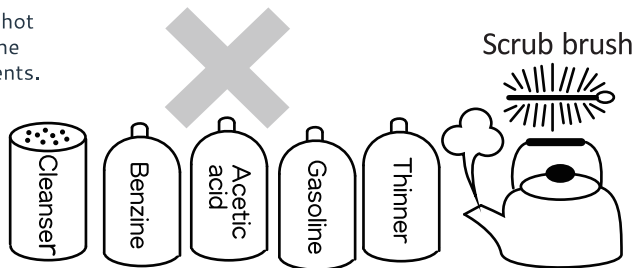

## 2 CHECKS

To ensure the safety, perform the following checks after cleaning.

- Is the power cord plug firmly inserted into a dedicated wall outlet? Confirm that the plug is not abnormally hot.
- Check the power cord for cracks and damage. Should the slightest irregularity be observed, contact the dealer from whom you purchased this unit or our customer's service.

# I IN CASE OF THE FOLLOWING

## 1 POWER FAILURE

Keep opening and closing of the door to a minimum.

Avoid placing new items in the cooler as this will raise the temperature inside the compartment.

## 2 WHEN NOT USED FOR A LONG PERIOD

Remove all items from the compartment and disconnect the power cord plug from the wall outlet.

Clean the compartment interior and wipe away all water.

To prevent mold formation and bad smell, leave the door open to dry the compartment completely.

## 3 TRANSPORTATION

Disconnect the power cord plug from the wall outlet.

When moving the cooler, make sure that the feet do not damage the power cord. Do not let the feet hit against floor steps, thresholds, etc.

## 4 TEMPORARY STORAGE

Affix a piece of wood, etc. Between the door and main unit to prevent complete closing of the door.

Make sure not to store the unused cooler at a location where children play.

Should a child enter the compartment and the door is closed, the child may not be able to open the door from the inside.



# I BEFORE REQUESTING SERVICE

Please check the following items if you encounter problems with the unit.

If the problem continues after taking the proper remedial actions, disconnect the power cord plug from the wall outlet.

Transfer the items stored in the cooler to a box or other container.

Then contact the dealer from whom you purchased this unit and be ready to provide information as listed in "REQUIRED INFORMATION" below.



CAUTION

To prevent any electrical shock hazards, do not disconnect the power cord plug from the wall outlet with wet hands.

Problem	Possible cause(s)
<p><b>No refrigeration at all</b></p>	<p>Is the power supply interrupted?</p> <p>Is the power cord plug disconnected from the wall outlet?</p> <p>Are the shop's power fuses blown and/or the circuit breaker activated?</p>
<p><b>Inadequate refrigeration</b></p>	<p>Is the temperature setting appropriate?</p> <p>Are items obstructing the cold air inlet and suction outlet?</p> <p>Are stored items packed too tight?</p> <p>Is the door open or is it opened and closed frequently?</p> <p>Is the condenser clogged?</p>
<p><b>Excessive noise</b></p>	<p>Are all feet in firm contact with the floor?</p> <p>Is the rear panel of the cooler contacting the wall or other objects?</p> <p>Are other objects in contact with the cooler?</p>
<p><b>Condensation on cooler exterior</b></p>	<p>Condensation may condense on the exterior and door during hot and humid days or depending on the place of installation. This occurs when the humidity is high and water particles in the air contact cold surfaces. This is normal. Wipe away condensation with a dry cloth.</p>

Showcase sometimes stop running when thermostat turns off.

# I REQUIRED INFORMATION

- ① Nature of malfunction  
(as accurately as possible)
  - ② Product number
  - ③ Serial number
  - ④ Customer's name, address, phone number
  - ⑤ Year and date of purchase
- } On rating label  
} On carton



Discarded electric appliances are recyclable and should not be discarded in the domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centres.

# WARRANTY AND SERVICE

We offers a limited 1-year warranty ("warranty period") on all of our products purchased new and unused from us with an original proof of purchase and where a defect has arisen, wholly or substantially, as a result of faulty manufacture, parts, or workmanship during the warranty period. The warranty does not apply where damage is caused by other factors, including without limitation:

- (a) normal wear and tear;
- (b) abuse, mishandling, accident, or failure to follow operating instructions;
- (c) exposure to liquid or infiltration of foreign particles;
- (d) servicing or modifications of the product other than by our company;

Our warranty covers all costs related to restoring the proven defective product through repair or replacement of any defective part and necessary labor so that it conforms to its original specifications.

A replacement product may be provided instead of repairing a defective product. Our sole obligation under this warranty is limited to such repair or replacement.

A receipt indicating the purchase date is required for any claim, so please keep all receipts in a safe place.

Although greatly appreciated, the product registration is not required to activate any warranty, and product registration does not eliminate the need for the original proof of purchase.

The warranty will be voided if repairs are performed by a non-authorized third party and/or if spare parts other than those provided by the Company are used.

You may also arrange for service after the warranty expires, at an additional cost.

These are our general terms for warranty service, but we always urge our customers to reach out to us with any issue, regardless of warranty terms.

If you have an issue with our products, please contact us, and we will do our best to resolve it for you.

