 


SKU: WC003-X3BS-USZX  
Model: LM-YL1-1163BX

# WATER DISPENSER

## *Instruction Manual*

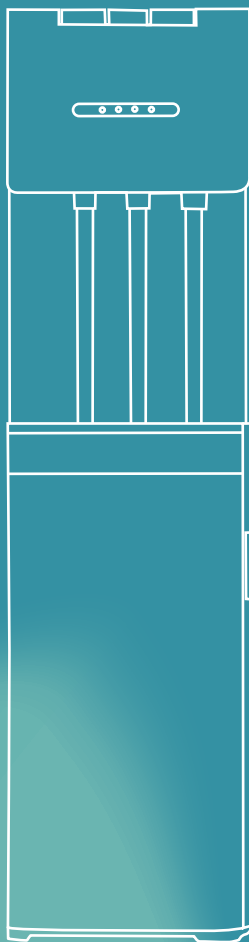

Congratulations on purchasing your new product. To ensure proper operation, please read this instruction manual carefully before using this product. Keep this manual in a safe place for future reference.



**Email:**

**[support@homyd.com](mailto:support@homyd.com)**

**Tel: 1-833-632-0897**

**Working hours: Mons to Fris,  
8 AM - 4 PM (PT)**



# Congratulations

**Dear Customer, So lucky to meet you guys !!!**

**Thank you for your trust in our products!**

**We want to provide you with sincere service. If there are any omissions or errors in your order. If you have any questions about using our products. Please contact us.**

**Email - (support@homyd.com).**

**Tel: 1-833-632-0897**

**Working hours: Mons to Fris, 8 AM - 4 PM (PT)**

**Our team will answer your queries online within 24 hours. Your satisfaction is our ultimate goal. We would appreciate it if you could share your experience with other shoppers on Amazon. If you just want to see a description of the problem, you can go straight to page 10 or contact us directly.**

**Email: support@homyd.com**

**Tel: 1-833-632-0897**

**Working hours: Mons to Fris, 8 AM - 4 PM (PT)**

**Our mission: To be the most trusted brand of electrical appliances, creating small and practical appliances that make your life better.**





# TABLE OF CONTENTS

Safety Precautions .....	02
Pre-operation Instructions .....	03
Structure and Name .....	04
Operatin .....	05-06
Maintenance .....	07
Caution .....	08
Troubleshooting Guide .....	09
Warranty and Service .....	10

# I Safety precautions

## Safety information



## Important safety instructions

### ! WARNING

When using electrical appliances, basic safety precautions should be followed, including the following:

- This water dispenser is not recommended for outdoor use.
- Do not locate the dispenser in area where the temperature may fall below freezing (32° F).
- Keep area around dispenser free of dust and dirt.
- Keep the reserve supply of water bottles away from excessive heat.
- Never unplug the water dispenser except for maintenance or extended periods of inactivity.
- Never change the power cord and never extend the length of the power cord.

# I Pre-operation Instructions

 
## WARNING

Be sure to read this section before using the machine!

- Before connecting the appliance to the power source. Let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- The water dispenser is pre-cleaned at the factory but the reservoir and water lines must be flushed with fresh water before use as follows:
- Keep the unit plugged.
- Fill water tank with tap water full to capacity. Wait for 5 minutes until water settles.
- Plug the dispenser into the electrical outlet. We are ready to complete the first cycle. In order to do that, wait for the cold water to reach temperature in other 50 minutes approximately.
- Unplug the dispenser from the electrical outlet. Proceed to drain the water from the faucets one at a time until no more water remains. (Note: To facilitate this operation, use a large container).
- Then, drain any water left in the tanks by opening both water faucets until it drains completely.
- Put the bottled purified or other dean water on the top cover one minute.
- Push water faucet buttons to insure water flows from both faucets.
- Plug dispenser again into the electrical outlet.
- Now you are ready to use your water dispenser.

**NOTE:** Your water dispenser has been cleaned and sanitized before leaving the factory, but in case a taste problem develops, place one tablespoon of baking soda and add tap water. Fill water tank again and repeat basic operations previously outlined.

# I Structure and Name

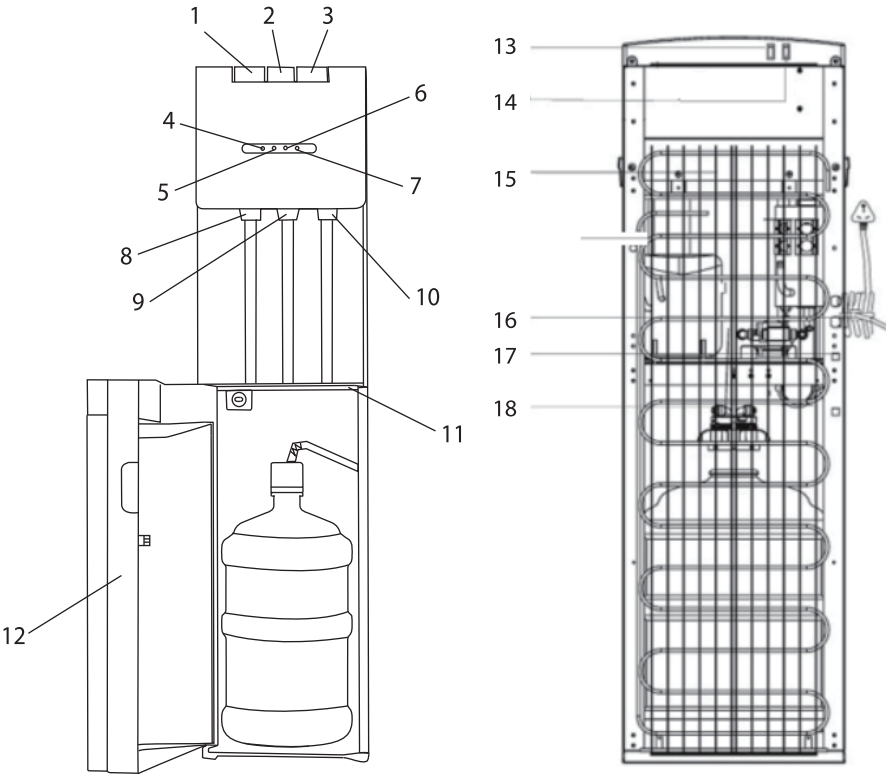

1	Hot water button	10	Cold water tap
2	Warm water button	11	Drip tray
3	Cold water button	12	Door
4	Power indicator	13	Cold switch
5	Heating indicator	14	Hot switch
6	Cooling indicator	15	Condenser
7	Water shortage indicator	16	Power cord
8	Hot water tap	17	Drain valve
9	Warm water tap	18	Water pump

# I Operation

- Place the water dispenser upright on a hard level surface near a grounded wall outlet. Leave an adequate space (10–20 cm) behind the water cooler for proper ventilation.
- When using the bottles with pure water, remove the cap of the water bottle and clean the outside of the new bottle with a cloth. Open the water dispenser door. Spot the pipe and insert it into the water bottle. Make sure the cap cover the bottleneck tightly, in order to ensure proper water circulation.
- Push the hot water tap. Bubbles are generated inside the bottle. Keep pressing the hot water tap until water flows out. Cold water doesn't require any adjustment.
- Turn the heating switch on. The red indicator on the front lights will be on and the heating system will start functioning. When the hot water reaches (86–95°C), the red indicator goes off. The heating system stops working, then it is on a warm mode. When the hot water temperature is lower than 85°C, the heating system will restart.
- Turn on the cooling switch, the cold indicator on the front panel will be on. The cooling system starts functioning when the cold water reaches 5–10°C (for compressor-cooling). When the cooling indicator goes off, the cooling system stops working and it is on a cold preserving mode. When the cold water temperature goes up to 10°C, the cooling system will restart.
- Cold and hot water: when the red indicator light is on, the heating system is active. When the red light goes off, it is on a warm-keeping status. When the green indicator light is on, the cooling system is active. When the green light goes off, it is on a cold keeping status.
- If the water cooler is not used for a long time, after the hot water cools down, please remove the power plug and drain the remaining water in the hot tank. Then tighten the cap. Open the cold water tap to drain the remaining water in the cold tank.

 
# I Operation

## ● Steps of changing water:

1. Open the door gently to keep it at a suitable angle, then pull out the water tube.
2. After pulling out the water tube, you can hang it on the hook of the door.
3. Remove the cap of the bottle, put the water tube into the new bottle and press it tightly to ensure proper water circulation.
4. Slide in the bottle into the cabinet of the water dispenser.

## ● Instructions of water shortage indicator light:

1. When there is water in water shortage tank, the water shortage indicator light is off.
2. When the water tank is overflowing, the water shortage indicator light is off and alarms for one minute.
3. When there is no water in the water shortage tank, water shortage indicator light flickers.
4. When there is water in storage tank but no water in bottle, the water shortage Indicator light in on & alarm for 30 seconds.
5. When the shortage water tank and bottle are both empty of water, the whole machine is locked, the water shortage indicator light flickers and alarms for 30 seconds.
6. When opening the door, the pump stops working, if the water level in the cold tank is higher than the water control level, the machine resumes normally.
7. When using a 5 gallon rectangular bottle, slide into place as shown below.

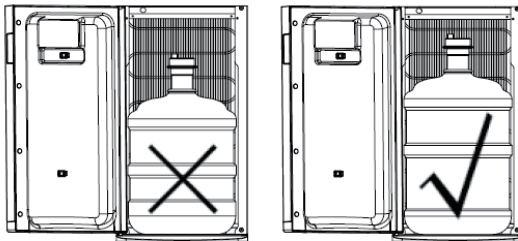

8. After changing water and closing the door, hot and cold tank have been filled with water, then water leakage lamp will be off automatically

# I Maintenance

- Remove power plugs or disconnect from the mains before performing any maintenance
- Never use unrecommended detergents or chemicals to clean the water tank. This could have health hazards
- Do not directly spray water on the surface of the product. Wipe the front and back of the product with water-soaked soft cloth.
- If dust or other foreign substance has accumulated on the condenser, wipe off with a water soaked soft cloth.
- After cleaning the product, completely dry it. Fill the water to the tanks until water comes out of the hot water tap, then connect the electric power plug. If the surface of the electric heater in the hot water tank is deposited by water deposition, heating capacity will decrease. Fill the hot water tank with aqueous solution of 2% edible citric acid and keep it for about two hours.. If the problems cannot be solved contact your dealer or the service center.
- If the supply cord on this device is damaged, it must be replaced with a special cord obtainable at the service center.

# I Caution

## Caution

- Do not use the bottle with any crack, leakage or holes.
- The back of the product should be put in shady places and kept away from wall and high-temperature elements.
- Please also put the product away from TV, video, or other valuables.
- The back of the device should be kept away from wall and away from exposure to direct sunlight or direct heat sources
- Children or persons with diminished capabilities, can only use the dispenser, if properly supervised
- During operation keep it beyond the children to avoid scald.
- Never turn on the heating switch when there is no water flow.
- When carrying it, keep the angle of the water dispenser less than 45°.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Adopt the ground wire to avoid any electric shock.
- In the process of using, check the water receptacle frequently. If the water receptacles full please pour the water out in time.
- Do not turn on and off the cooling switch in three minutes to protect the compressor and extend the compressor usage life.
- WARNING—Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING—Do not damage the refrigerant circuit.
- WARNING— Do not damage the refrigerant circuit.
- WARNING— Do not use electrical appliances inside the food storage compartments of appliance, unless they are of the type recommended by the manufacturer.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



# I Troubleshooting Guide

Problem	Possible cause
Water cooler does not operate	<ul style="list-style-type: none"><li>● Not plugged in</li><li>● The circuit breaker tripped or blown fuse.</li></ul>
Water cooler is not cold enough	<ul style="list-style-type: none"><li>● Check to be sure the cold switch on the back is on.</li><li>● The water cooler does not have the correct clearance.</li></ul>
Water cooler hot water is not hot enough	<ul style="list-style-type: none"><li>● Check to be sure the hot switch is on</li></ul>
Compressor turns on and off frequently	<ul style="list-style-type: none"><li>● The room temperature is hotter than normal.</li><li>● The water cooler does not have the correct clearance.</li></ul>
Vibration	<ul style="list-style-type: none"><li>● Check that the water cooler is levelled properly</li></ul>
The water cooler seems to make too much noise	<ul style="list-style-type: none"><li>● Some noise may come from flowing refrigerant, which is normal.</li><li>● As each cycle ends, you may also hear gurgling noise.</li><li>● Contraction and expansion of inside walls may cause popping and cracking noises.</li><li>● The water cooler is not level.</li></ul>

## WIRING DIAGRAM

<b>SKU: WC003-X3BS-USZX</b>	
Model: LM-YL1-1163BX	
VOLTAGE: 110V~60HZ	
Rated Power Input (heating): 430W	
Rated Power Input (cooling): 80W	
Net Weight: 36.38 lbs	<b>Made in China</b>
DIMENSION: 41(H)*14(W)*12(D) in	

# I Warranty and Service

This product is covered by a 12-month product and warranty from the date of initial purchase. In case of any problems, please contact the Customer Service Center via the contact information listed in this User Guide.

Our warranty covers replacement products by repairing or replacing any defective parts and labor necessary to bring it up to its original specifications, and we can provide a replacement product instead of repairing the defective product. Our sole obligation under this warranty is limited to such repair or replacement.

Any claim will require a receipt showing the date of purchase, so please keep all receipts in a safe place. While greatly appreciated, product registration is not required to activate any warranty and product registration does not eliminate the need for proof of original purchase. The warranty will be voided if repairs are performed by a non-authorized third party and/or if spare parts other than those provided by us are used. These are the general terms of our warranty service, but we always urge our customers to contact us ([support@homyd.com](mailto:support@homyd.com)) with any questions they may have, regardless of the terms of the warranty. Tel: 1-833-632-0897 Working hours: Mon to Fri, 8 AM – 4 PM (PT)



